
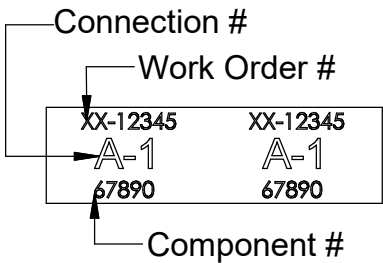


**GENERAL INSTRUCTIONS:**

- Wipe down all extrusion, clean work area.
- Repack fabric neatly in the bag provided.

**WARNING:**

Hanging system and structure are designed for:  
(1) indoor use only and (2) to hold the weight of the structure and fabric cover only. No other loads should be applied to this display system.

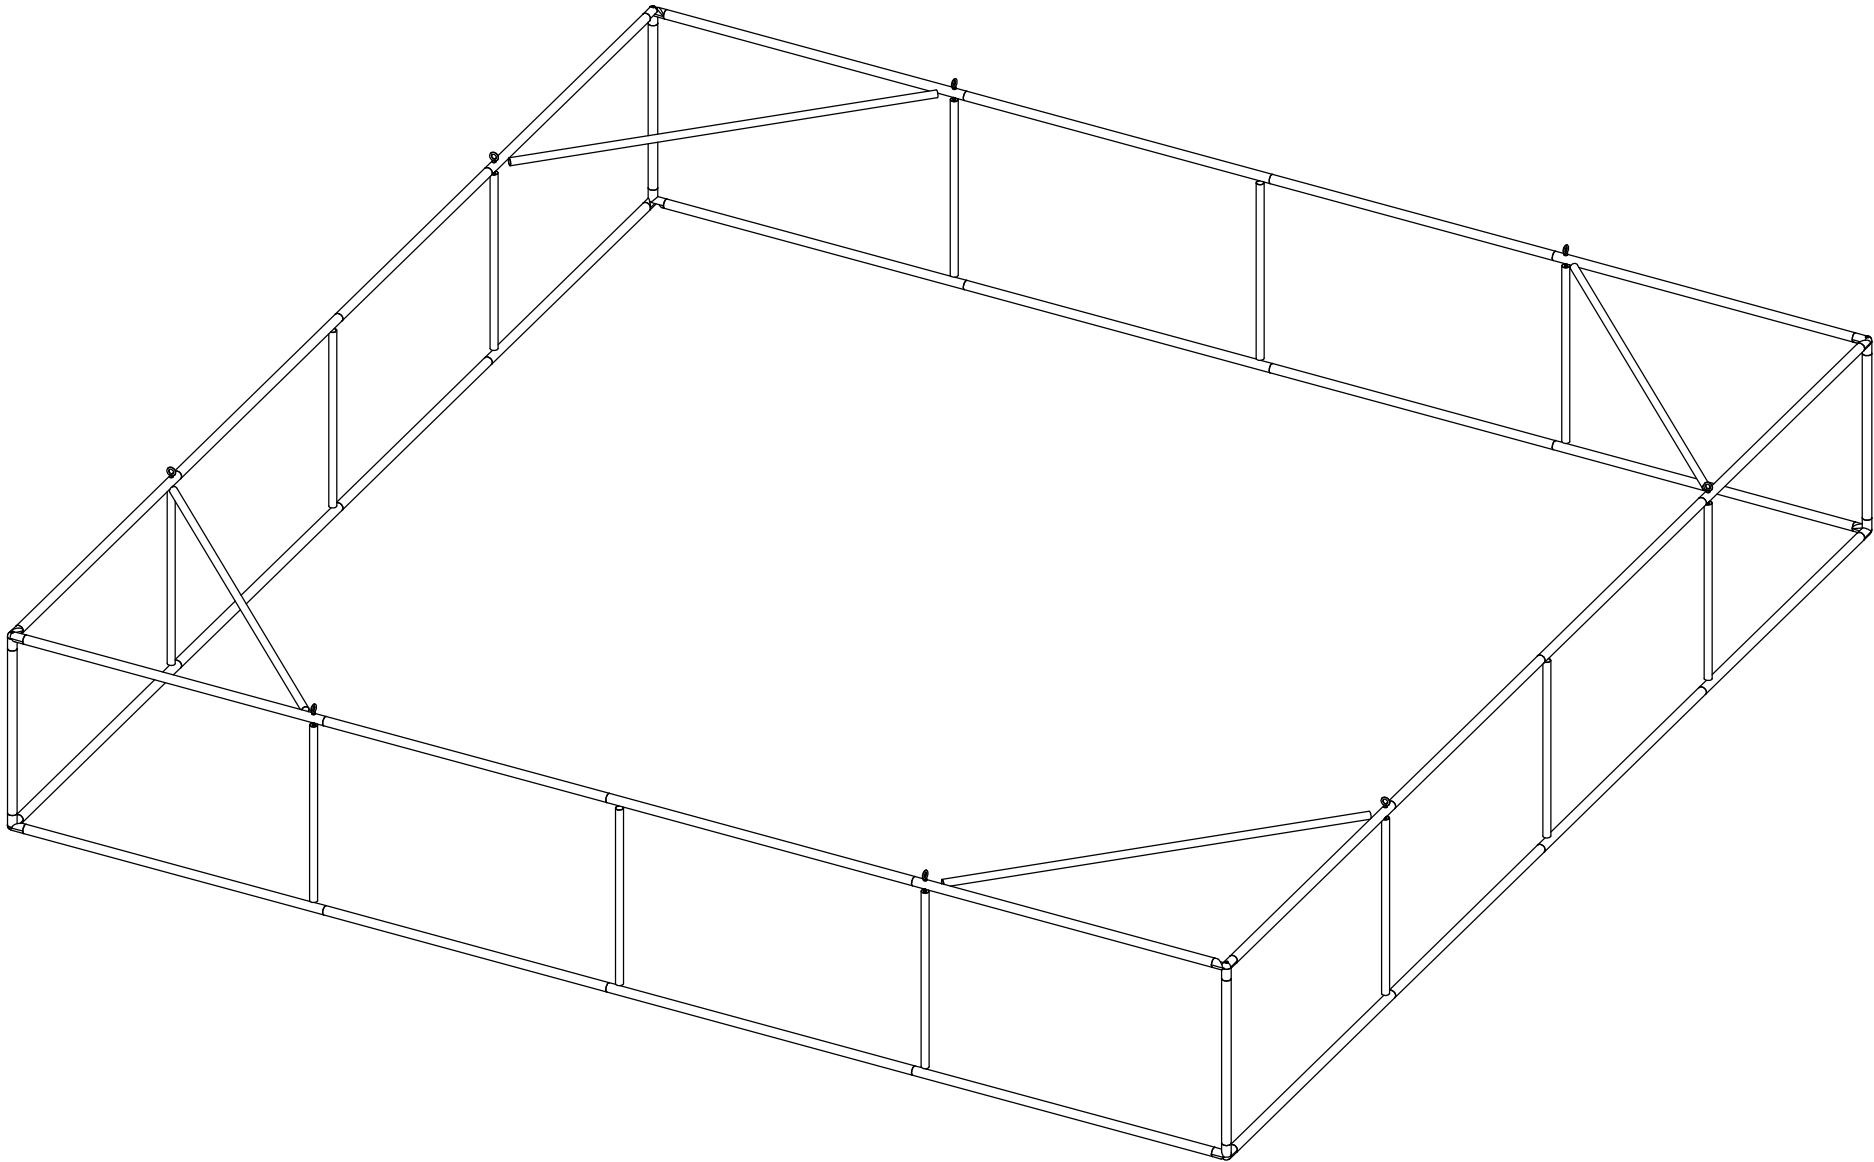


By signing the order acknowledgment or sending a confirmed purchase order, you are agreeing to the Moss Terms & Conditions found on our website here:

[www.mossinc.com/terms-and-conditions](http://www.mossinc.com/terms-and-conditions)



ESTIMATED WEIGHT:		90lbs	
PARTS LIST (PER UNIT):			
QTY REQUIRED:	DESCRIPTION:	QTY PACKED:	BAG/BOX LOCATION:
4	TOP RAIL		
4	BOTTOM RAIL		
4	CORNER RAIL		
12	SPREADER		
4	DIAGONAL RAIL		
1	FABRIC COVER		
8	#4001117 - 5/16-18 X 2.25" EYE BOLT		
32	5/16-18 X 2.25" BOLT		



Do Not Mix Component #'s  
No "Dumping"

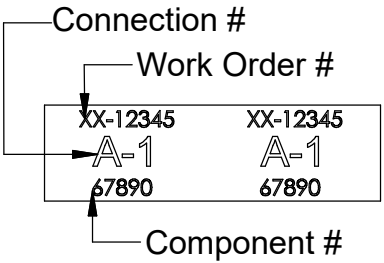

DIMENSIONS

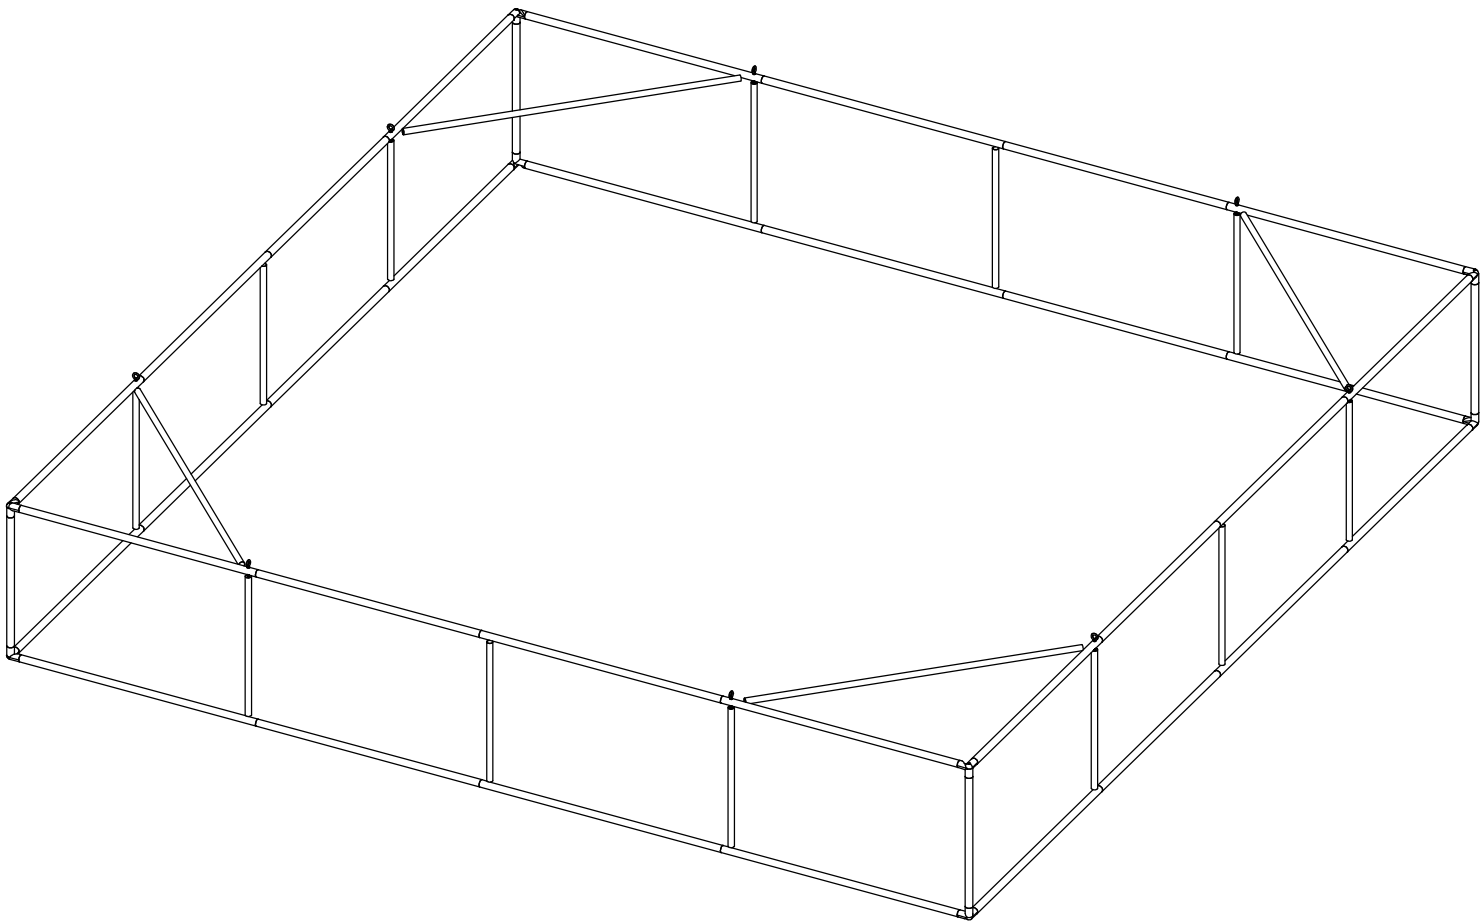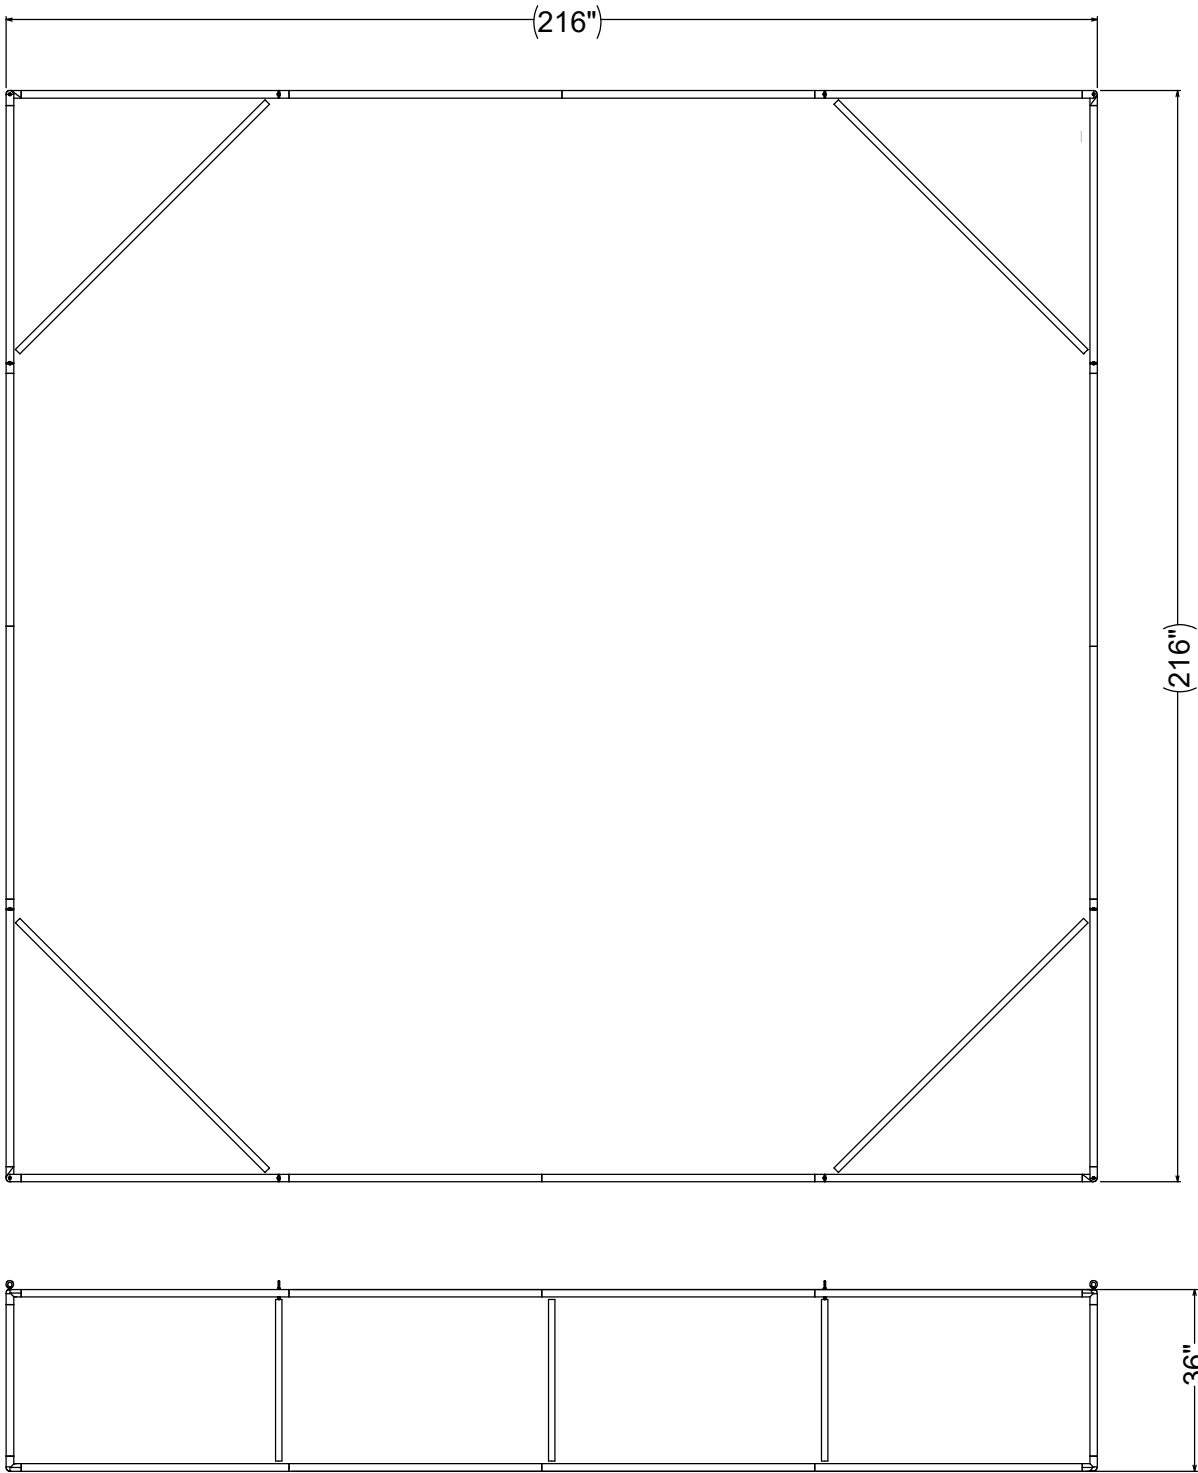

Before You Start:


Unpack all boxes, remove all framing and components according to line item #.

STEP 1




Do Not Mix Component #'s  
No "Dumping"

Snap together shock corded frame sections, then assemble perimeter frame as shown.

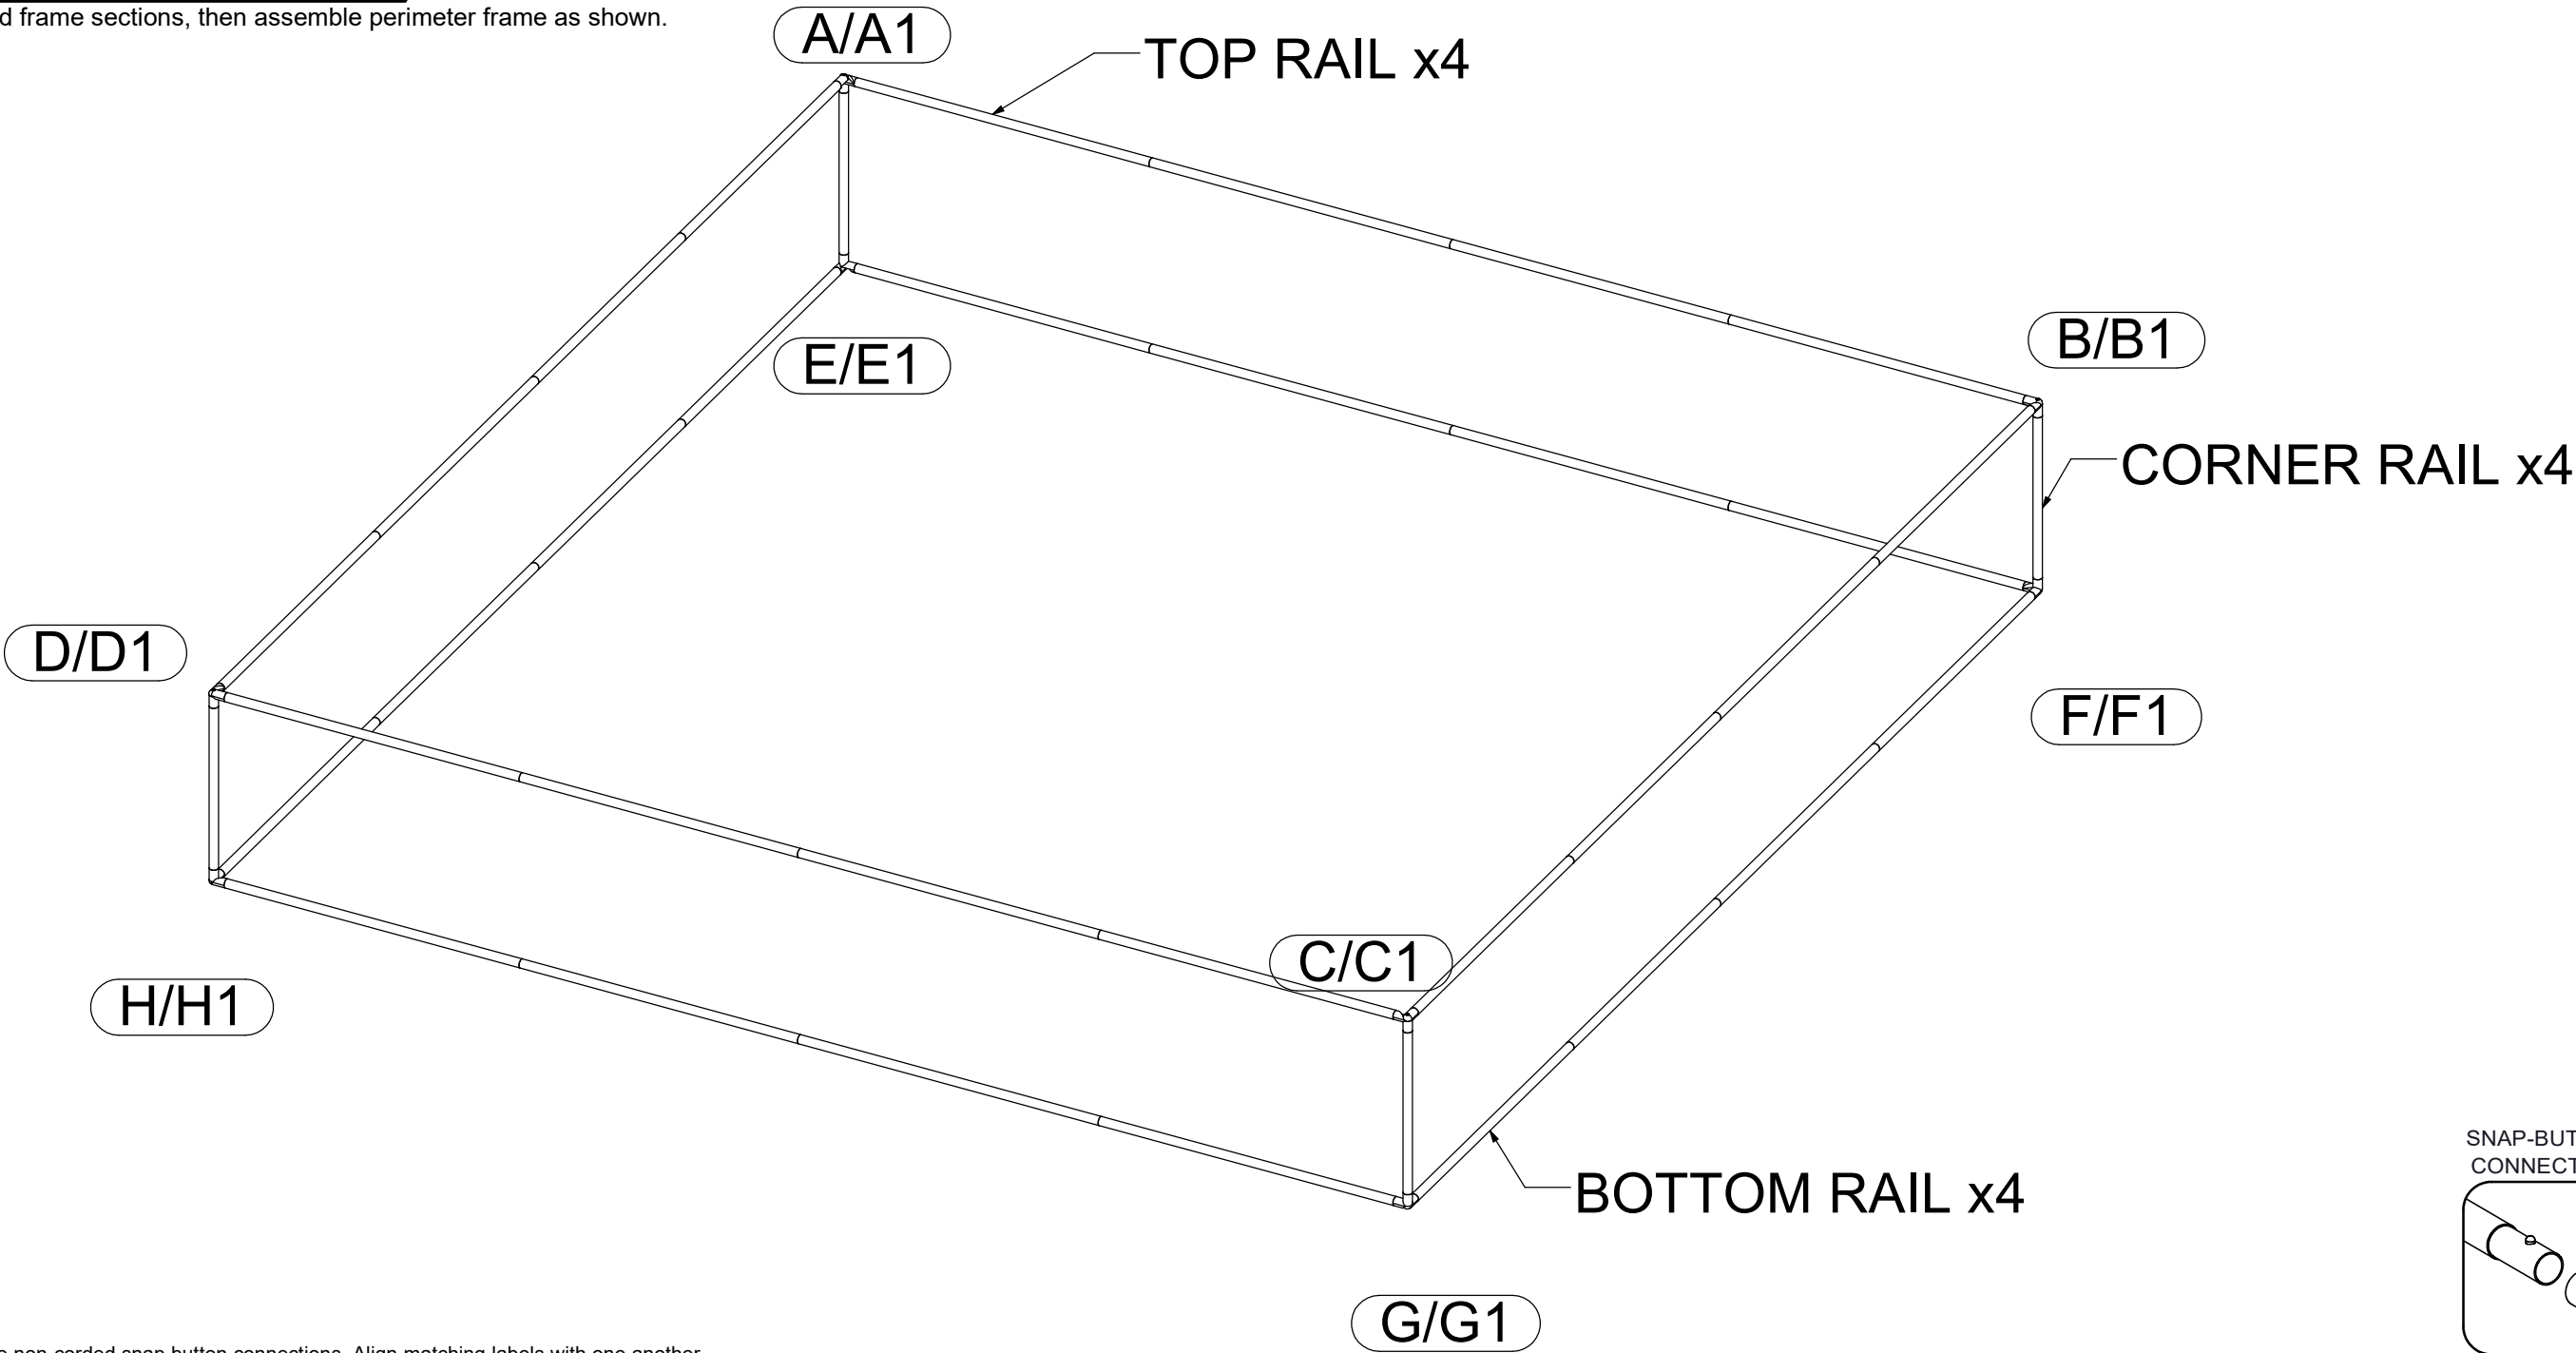

NOTE: Alphabetical labels indicate non-corded snap button connections. Align matching labels with one another.

SNAP-BUTTON  
CONNECTION

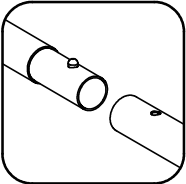

CLIENT:  
NEU CONCEPTS

PROJECT:  
VELOXIS | BL 5295

PROJECT MANAGER:  
JEAN SUPAN

W.O.DESCRPTION:  
SQUARE SIGN \*FRAME & DS  
FABRIC

DESIGNER:  
JHH

CURRENT REVISION:  
0

W.O.#:

22-02969


LINE ITEM #:

2066175


MOSSINC.COM  
CONTACT US: (800) 341-1557  
AFTER HOURS: (877) 214-2986

STEP 2

Bolt internal framing in place as shown.

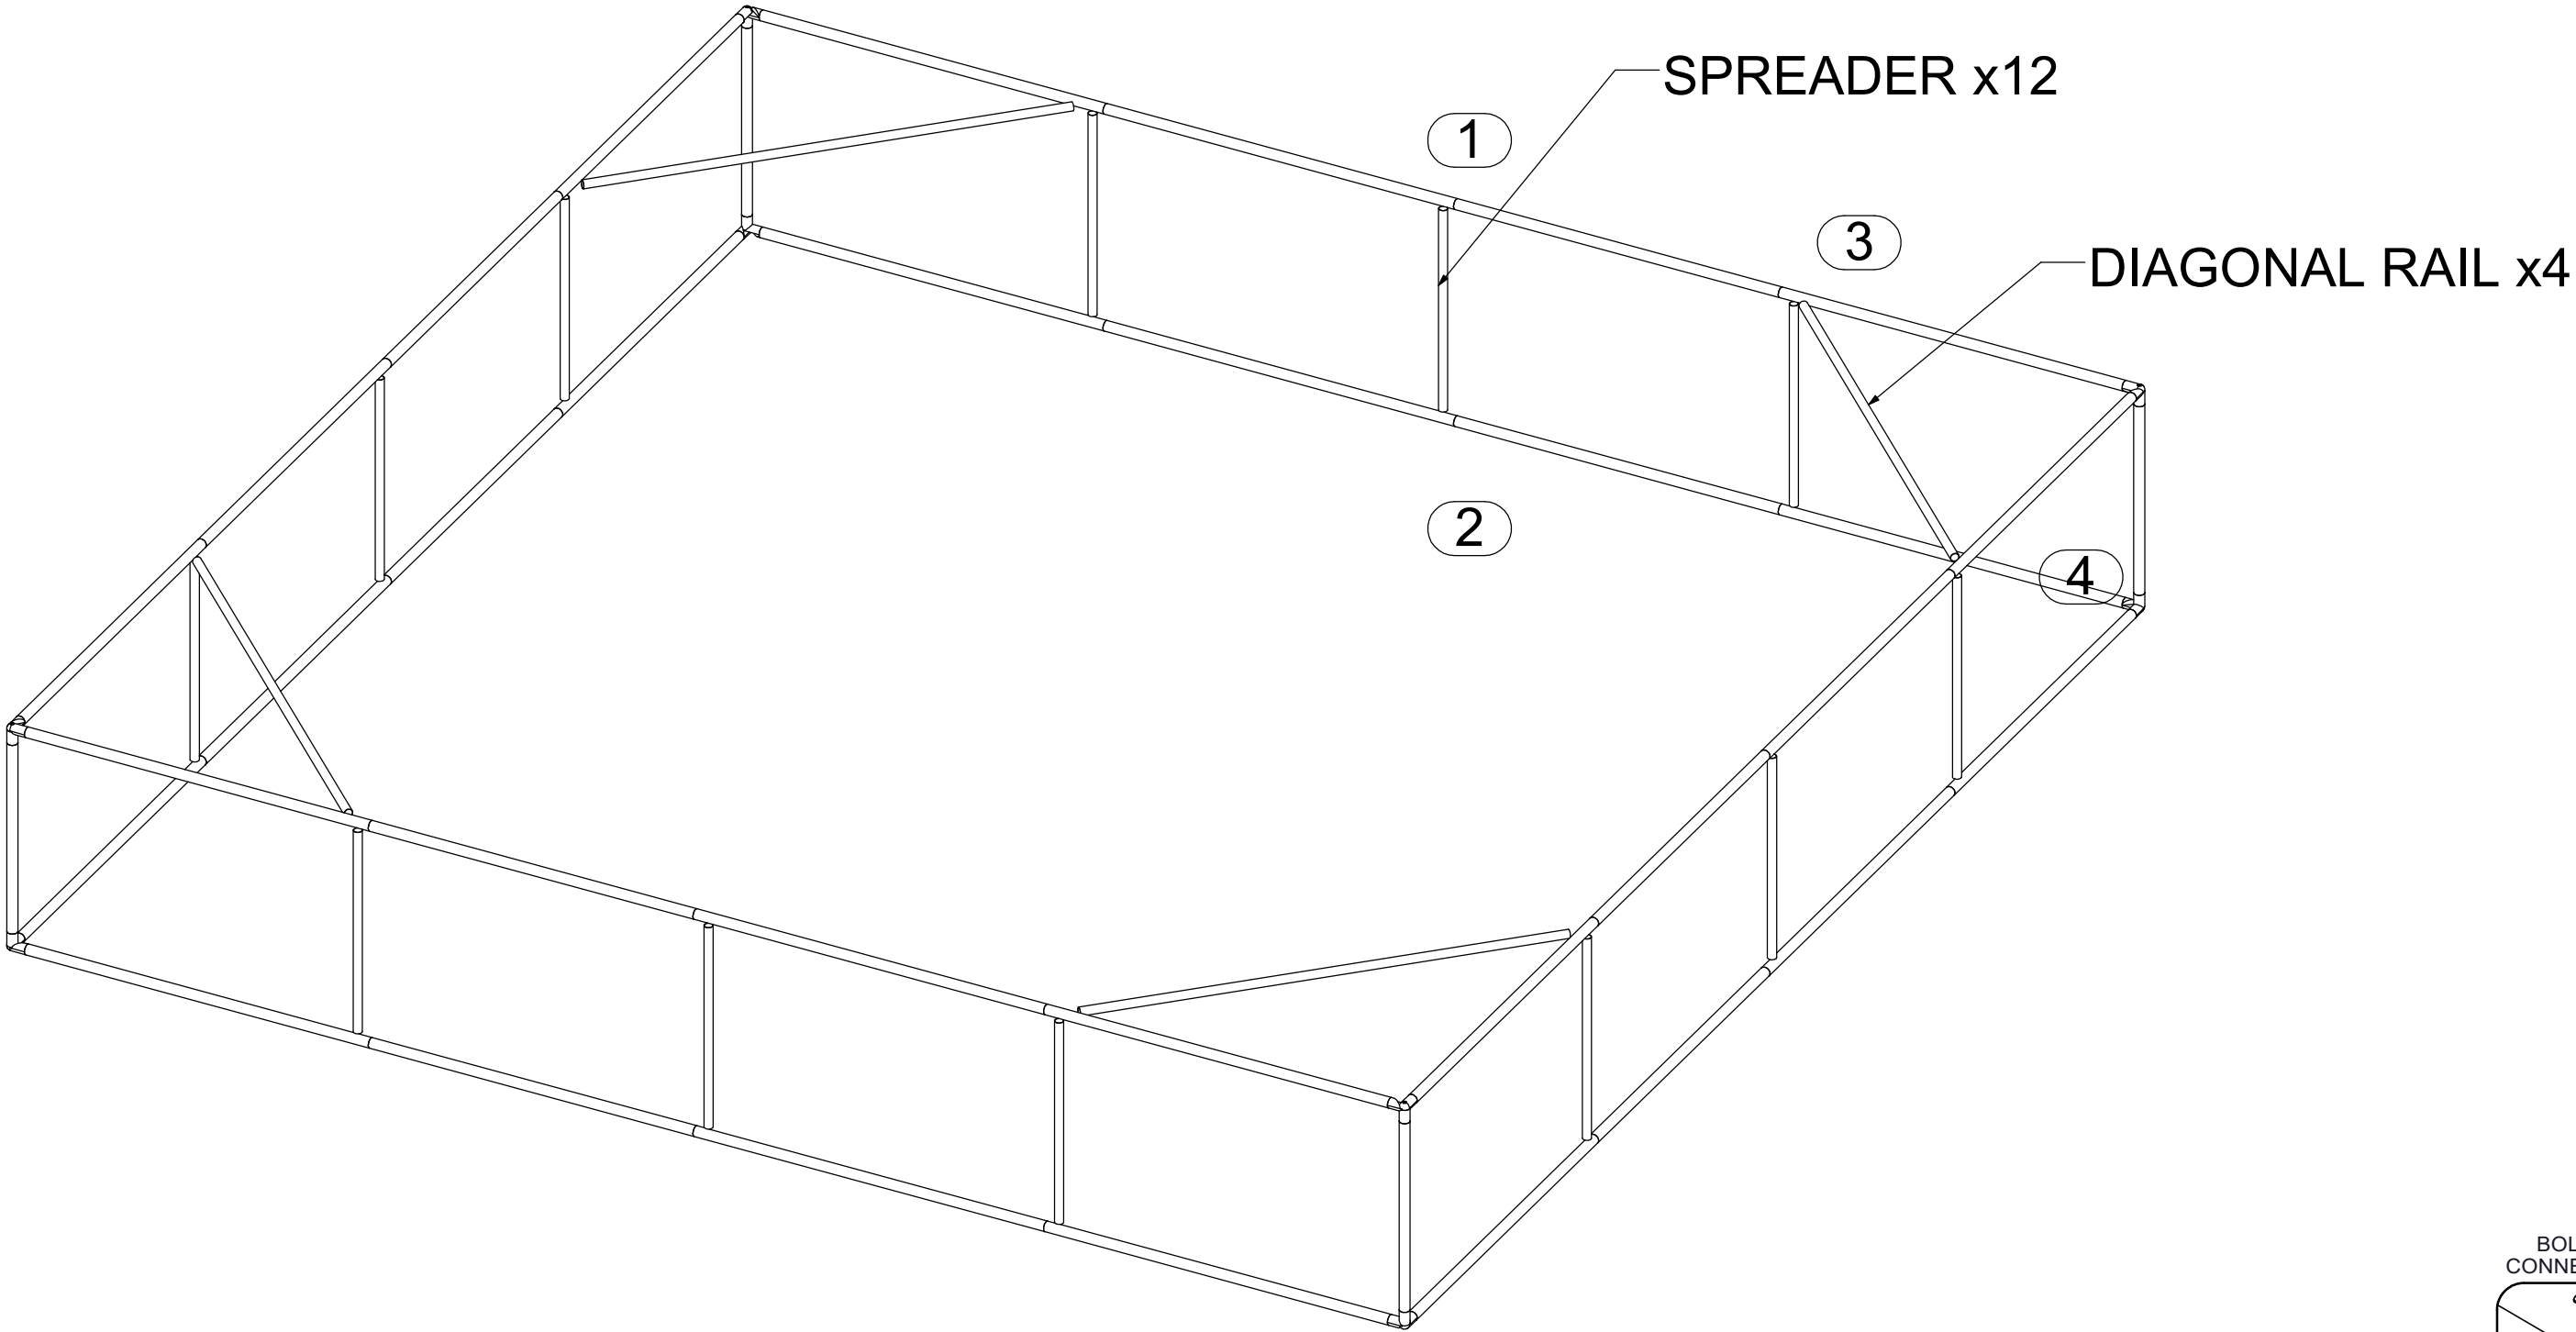


NOTE: Numerical labels indicate bolted connections. Align matching labels with one another.

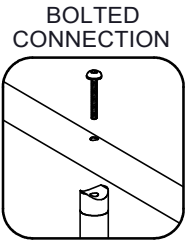

STEP 3

Wipe down all aluminum framing. Remove fabric cover from storage bag and verify proper orientation. Carefully and evenly pull cover around frame. Align openings in cover and/or zipper breaks with eyebolt locations. Zip cover closed along edge(s) of frame as shown. Zipper location and orientation is shown in **Heavy** dashed lines. Start all zippers before closing any one completely.

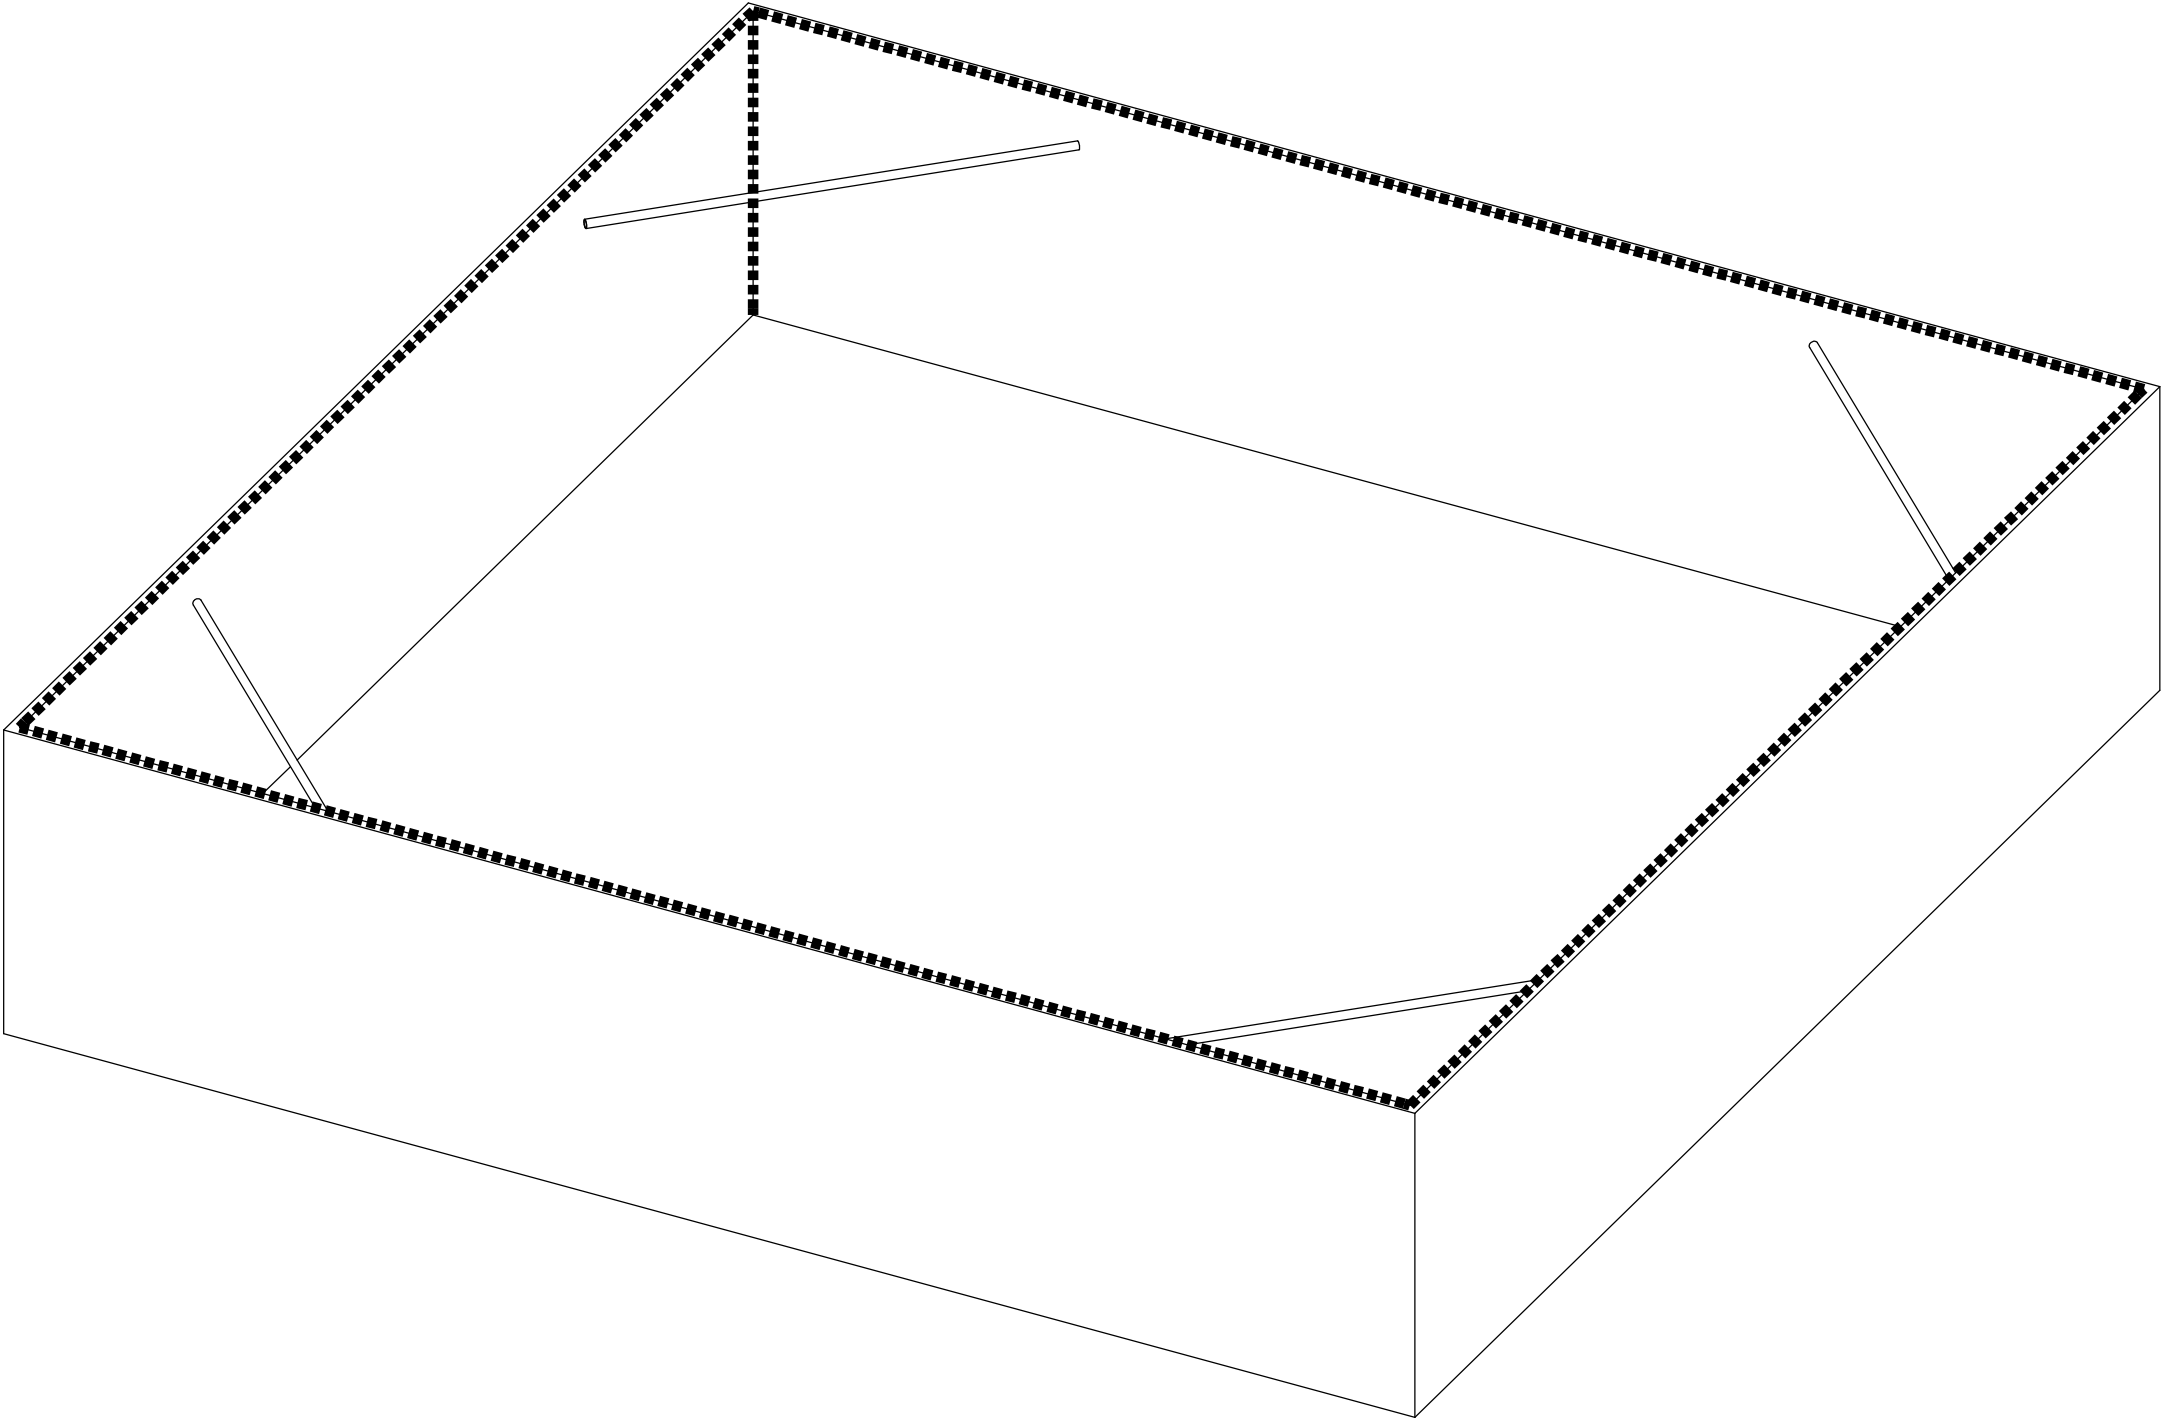

Fabric tags align with "Place Fabric Tag Here" label on frame.



STEP 4

Attach eyebolts.

